Toshiba XM-6201B SCSI CD-ROM Reader Strapping Information

LED Activity Table


| LED Activity | Action |
|------------------------------|--|
| Blinks at 0.8sec intervals | After drawer is closed until the following |
| OFF | drive goes to idle status |
| Continuously OFF | no disc mounted |
| Blinking at 3.2sec intervals | Cleaning for disc or Optics required |
| Continuously ON | Media has problem |
| Blinking at 1.6secs | Playing an Audio track |
| ON | When performing data access |

Option Jumpers and Connectors

Mating Connectors

| Audio Front | industrial stereo mini type |
|-------------|--------------------------------|
| Audio Rear | Molex 08-50-0114 or equivalent |
| Power | AMP PN 1-480424-0 |
| SCSI | 3M PN 3425-3000 |

Options

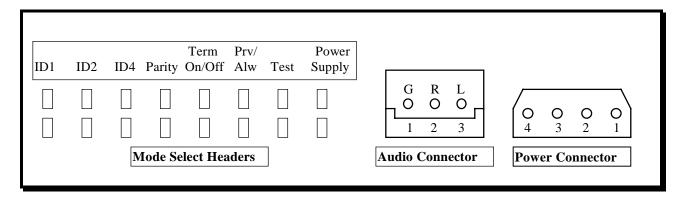

Mode Select Headers, Audio and Power Connectors

| Jumper Block | Function |
|--------------|-----------------------------|
| ID1 | SCSI ID 1 |
| ID2 | SCSI ID 2 |
| ID4 | SCSI ID 4 |
| Parity | Parity Enable |
| Term On/Off | Term Enable |
| Prv/Alw | Prevent Allow Media Removal |
| Test | TEST MODE (DO NOT INSTALL) |
| Power Supply | Term Power |
| | |
| Audio | |
| Connector | |
| 1 | GND - Ground |
| 2 | R - Right |
| 3 | L - Left |
| Power Plug | Function |
| Pins | |
| 1 | +12VDC |
| 2 | GND |
| 3 | GND |
| 4 | +5VDC |